

MOUNTING INSTRUCTIONS OF CHROME BIN

You can mount your waste-bin that may be attached to either the right or the left side of the cupboard considering the opening direction of the cupboard door.

The waste-bin cover may rotate around its own axis, so provide to corner of plastic part where will be mounting the side. (Picture 1.)

Place the No.1 pattern inside the cupboard in the direction of the arrow and cut out the part that corresponds to the hinge. Mark the screw holes that will carry waste-bin (4 holes). Assemble the pieces. (Picture 2.)

Use the bottom carrier's hole by means of No.2 pattern. also put the same direction with arrows. Then, mark the two holes on the director hole center and mount. Attach the pin in the bottom corner of the waste-bin to the hole of the bottom carrier.

Then fix the director which is mounted to cupboard door into the channel which is at bottom basket. (Picture 3.)

Finally, align the holes of up carrier and waste-bin, insert the pin. Open the door, pull the cover of basket to the angle 70° and mount the rope of the cover. (Picture 4.)

